

# 60 " FARM JACK

Versatile tool will lift, push or pull, Lifts equipment, small buildings and trucks. Use for fence work, winching, dumping wagons, removing stumps, and dozens of other applications.

## Specifications

---

Lifting capacity:

7000 lb (3175kg) (Rating established at a height of 1 ft) when lifting.

6000 lb (2722kg) when suspending by the top clamp and used as a hoist.

1000 lb (453kg) when used as a clamp between the top piece and the lifting nose.

Maximum height: 60" (152cm)

Minimum height: 6" (15cm)

Net weight: 30 lb (15kg)

## READ BEFORE USING JACK


---

- ◆ Visually and operationally inspect Jack before each use

- 1 -

- ◆ Improper use of this Jack is HIGHLY HAZARDOUS.
- ◆ Put handle in upright position before tripping the reversing latch to lower load.
- ◆ Always keep firm grip on handle.
- ◆ **KEEP JACK CLEAN AND OILED**
- ◆ Front and back of rail must be kept rust free.
- ◆ Place complete lifting nose of Jack under object to be lifted. Lifting nose pulls up to point of lift without pumping handle.
- ◆ Always lock and stabilize load to be lifted as Jack will not stabilize load.
- ◆ Be sure Jack is firmly supported on suitable base so it will not slip or shift during operations, and load is properly supported at lift point to prevent shifting.
- ◆ All persons shall be clear of load being raised, lowered or pulled. Never work under a raised load unless using additional supports and insert 1/2" blot (not included) through hole in steel standard immediately below lifting mechanism.
- ◆ If any part of Jack fails to work properly, discontinue and have repaired.
- ◆ **Never attempt to repair Jack while Jack is under load.**
- ◆ Never push lifted load off Jack.
- ◆ Shear pin breaks and handle drops if you exceed **7000 lb (3175kg) capacity** at 1 ft height.
- ◆ Jack must be loaded 110 lb (49.896kg) or more to lower step by step. Otherwise lifting nose drops.
- ◆ **ALL WARRANTIES VOID IF EXTENDER ON HANDLE IS USED**

- 2 -

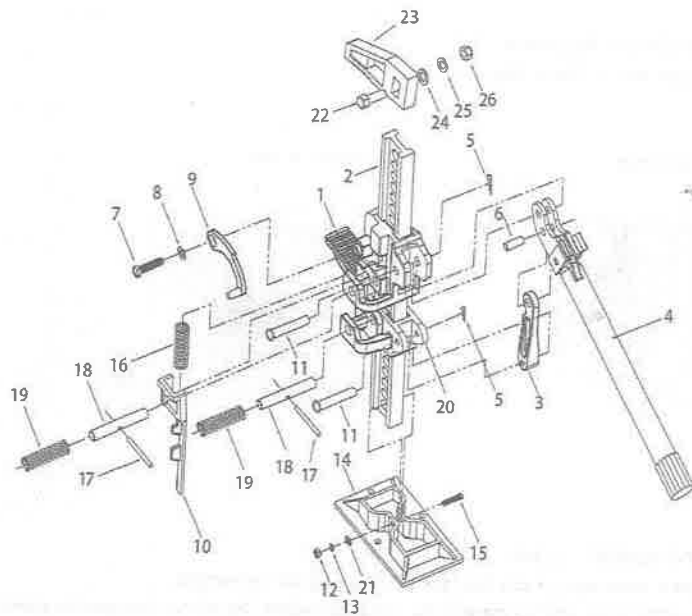

| Ref No. | Description             | Qty | Ref No. | Description   | Qty |
|---------|-------------------------|-----|---------|---------------|-----|
| 1       | Lifting Arm             | 1   | 18      | Reverse Rod   | 2   |
| 2       | Steel Rail              | 1   | 19      | Spring        | 2   |
| 3       | Connecting Rod          | 1   | 20      | Small Runner  | 1   |
| 4       | Handle Assembly         | 1   | 21      | Flat Washer   | 1   |
| 5       | R-Clip                  | 2   | 22      | Screw         | 1   |
| 6       | Pin                     | 1   | 23      | Stop Block    | 1   |
| 7       | Screw                   | 1   | 24      | Flat Washer   | 1   |
| 8       | Washer                  | 1   | 25      | Spring Washer | 1   |
| 9       | Reversing Lever-Silver  | 1   | 26      | Nut           | 1   |
| 10      | Reversing Latch -Silver | 1   |         |               |     |
| 11      | Pin                     | 2   |         |               |     |
| 12      | Nut                     | 1   |         |               |     |
| 13      | Spring Washer           | 1   |         |               |     |
| 14      | Base                    | 1   |         |               |     |
| 15      | Bolt                    | 1   |         |               |     |
| 16      | Spring                  | 1   |         |               |     |
| 17      | Reverse Rod Pin         | 2   |         |               |     |

## FARM JACK



## FARM JACK