



Changzhou Toptree Auto Lamp Co., Ltd.

21 Block, Electromechanical Industrial
Park, No. 538 Hehai West Road,
Xinbei District, Changzhou, Jiangsu, China
213022

Tel: 0086-519-81193809

Fax: 0086-519-85281830

E-mail: info@cntoptree.com

Website: www.cntoptree.com



LED AMBER STROBE LIGHT TPF09 USER MANUAL

Thank you for purchasing Toptree LED lights. In order to install and use the light correctly, please read the below instruction after unpacking.

Specification :

1. Part #: TPF09
2. Wattage: 6W
3. Current Draw: 0.5A@12V, 0.25A@24V
4. Operating Voltage: 10-110V
5. Color Temperature: 6000K
6. Beam Pattern: Flashing
7. Lens Material: PC
8. Housing Material: ADS12 casting aluminum with heatsink
9. IP Rating: IP67
10. Working Temperature: -45-80°C
11. Mounting Hardware: Two pieces screws and 3M rubber pad
12. Cable Length: 0.25 meters(0.82')
13. Lifetime: 50,000 Hours

Preliminary steps :

1. Carefully read this information before to proceed with installation.
2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3. Before to proceed disconnect the main power from the vehicle to avoid accidental shortcurts.



21 Block, Electromechanical Industrial
Park, No. 538 Hehai West Road,
Xinbei District, Changzhou, Jiangsu, China
213022

Tel: 0086-519-81193809

Fax: 0086-519-85281830

E-mail: info@cntoptree.com

Website: www.cntoptree.com

Changzhou Toptree Auto Lamp Co., Ltd.

-
4. If possible place the cable following the existing routes.
 5. Be sure that cable is not fixed to movable parts of the vehicle.

Connection :

1. Find an afterkey voltage source according to the voltage specification (10VDC-110VDC).
2. Connect the RED (+) wire to the positive of the above mentioned source. Connect the black one to negative.
3. Reconnect the main power of the vehicle, switch the key on and verify if the lamp switches on. If not re-check all the previous point.

Warnings :

1. Follow the indications on the operating voltage range (10VDC-110VDC).
2. Keep the lamp exposed to air flow to avoid overheating.
3. Temperature of the lamp can increase with continuous use.

Assembling :

1. Fit the lamp on the bracket using the included screws, washers and nut. Position the lamp to the wanted inclination. Tighten the nut.
2. Check the stability of the overall assembly.

Thank you again for choosing Toptree!