

PANEL-V



PARTS:

1 BASE
2 UPRIGHTS
4 6X2 POLY ON POLY SWIVEL CASTERS
2 8X2 POLY ON POLY RIGID CASTERS

HARDWARE:

8 ½-13X1 ½ HEX HEAD BOLTS
24 3/8-16X1 HEX HEAD BOLTS
24 3/8 FLAT WASHERS
24 3/8 LOCK WASHERS



MaterialHandling.com

1415 Davis Rd Elgin, IL 60123

Powered by Premier Handling Solutions, Inc.

materialhandling.com | (855) 719-1415 | sales@materialhandling.com

PANEL-V CART ASSEMBLY

- 1.) For the caster assembly:
Swivel casters are to be installed on both ends of the cart's base
Tip the base onto its side. Located at each corner of the cart you will see
caster pads with 4 holes in each one.
Attach a 6x2 swivel caster to each corner, using the 16 3/8-16x1 bolts, 16
3/8 lock washers and 16 3/8 flat washers.
Rigid casters are to be installed in the middle of the carts base using 8
3/8-16x1 bolts, 8 3/8 lock washers and 8 3/8 flat washers.
- 2.) Return the cart to its upright position.
- 3.) For upright assembly:
Located on each end of the cart's base you will see 4 threaded holes, bolt the
uprights to the base using the 8 1/2-13x1 1/2 bolts.

Safety precautions

- Never exceed the maximum capacity of 2,000 pounds/907 kgs.
- Load must be evenly distributed on platform to insure stability.
- Always operate unit on a level surface to insure stability.
- Use caution in moving a loaded unit; avoid obstructions and floor defects.
- Never sit or ride on the unit.