



MaterialHandling.com


1415 Davis Rd Elgin, IL 60123

Powered by Premier Handling Solutions, Inc.

materialhandling.com | (855) 719-1415 | sales@materialhandling.com

JIB-HC-Series Jib Cranes

Instruction Manual

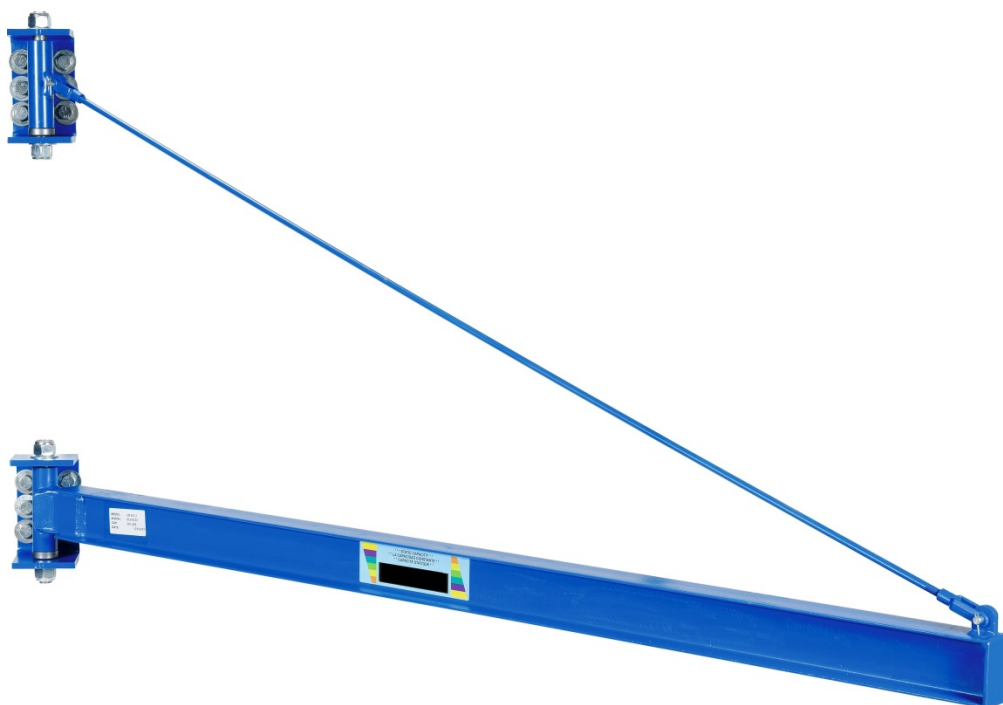

Receiving instructions:

After delivery, IMMEDIATELY remove the packaging from the product. Inspect the product closely to determine whether it sustained damage during transport. If damage is discovered, record a complete description of the damage on the bill of lading and notify the freight carrier. If the product is undamaged, discard the packaging.

NOTICES:


- 1) Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the product is *used* is the responsibility of the end-user.
- 2) VESTIL is not liable for any injury or property damage resulting from failure to apply either:
 - a) Instructions in this manual; or
 - b) Information provided on labels affixed to the product.
- 3) Vestil is not responsible for consequential damages sustained while assembling, using, or maintaining this product.

Table of Contents

Jib specifications.....	2
Signal words.....	2
Safe use recommendations.....	2 - 3
Function tests.....	3
FIGS. 1-4: Exploded parts diagrams and bills of materials.....	3 - 5
Assembly instructions.....	5 - 6
Use instructions.....	7
Inspections & Maintenance.....	8 - 9
Labeling diagram.....	9
Limited warranty.....	10

Jib Specifications:

Crane dimensions and net weight appear in the table below.

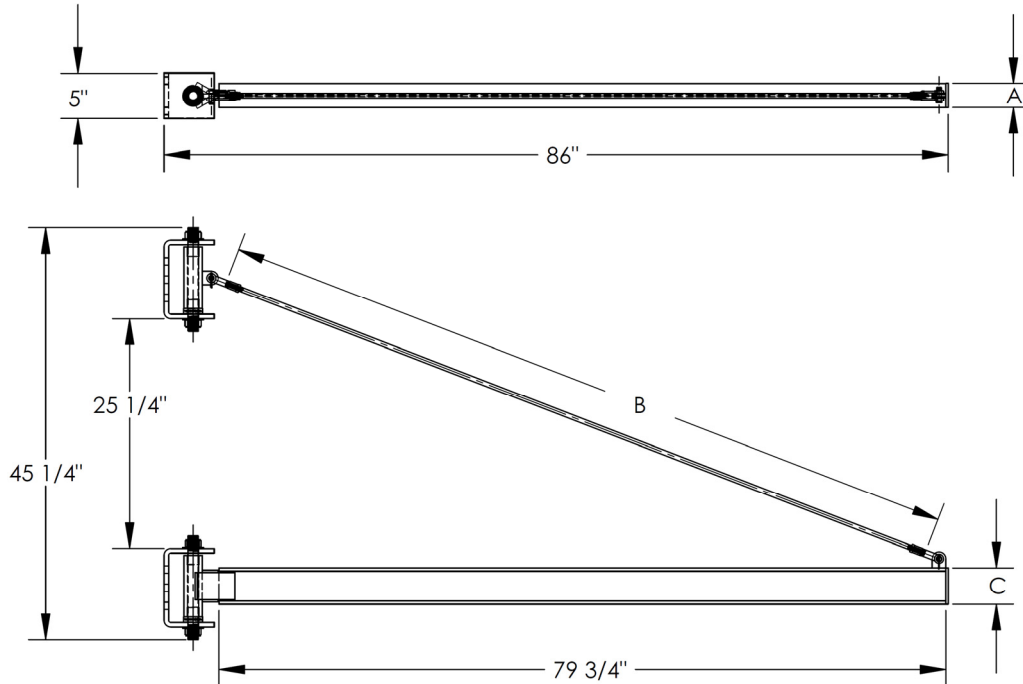

Model	A	B	C	Capacity	Net wt.
JIB-HC-3	2 ¹¹ / ₁₆ "	82 ¹ / ₄ "	4"	300 lb.	102 lb.
JIB-HC-6	2 ¹¹ / ₁₆ "	82 ¹ / ₄ "	4"	600 lb.	102 lb.
JIB-HC-10	2 ¹¹ / ₁₆ "	76 ³ / ₄ "	4"	1,000 lb.	110 lb.
JIB-HC-20	4"	76 ³ / ₄ "	6"	2,000 lb.	143 lb.

SIGNAL WORDS:

This manual uses SIGNAL WORDS to call attention to uses of this product that are likely to result in personal injuries or property damage. The signal words used in this manual appear below along with their definitions.

⚠ DANGER	Identifies a hazardous situation which, if not avoided, WILL result in DEATH or SERIOUS INJURY . Use of this signal word is limited to the most extreme situations.
⚠ WARNING	Identifies a hazardous situation which, if not avoided, COULD result in DEATH or SERIOUS INJURY .
⚠ CAUTION	Indicates a hazardous situation which, if not avoided, COULD result in MINOR or MODERATE injury.
NOTICE	Identifies practices likely to result in product/property damage, such as operation that might damage the product or other property.

Safe Use Recommendations:

Study the entire manual before using this crane. Store a copy of the manual with the crane. Read the manual to refresh your understanding of the safe operation, inspection or maintenance procedures whenever necessary.

⚠ DANGER	DO not install or use the crane in areas where the crane will contact electrified wires. Electrocution might occur if the crane, hoist, or load, etc. contacts electrified wires.
⚠ WARNING	Improper or careless operation might result in serious personal injuries. • ALWAYS apply operation, inspection, and maintenance recommendations in 29 CFR 1910.179. Contact the occupational safety and health institution of the state where the crane is used for requirements applied to jib cranes. • DO NOT use a damaged or malfunctioning jib! Restore the crane to normal operating condition before returning it to service.

WARNING

(continued from p. 2)

- DO NOT exceed the capacity of your jib (see table in “Jib specifications” section on p. 2). The weights of the load, hoist, trolley, rigging, and all other equipment attached to the jib must be added together to determine the net weight applied to the jib. The net weight must never exceed the capacity.
- Always perform the “Function Tests” (below) before each use.
- Inform all persons in the area that you are going to use the crane; instruct them to stay clear of the device and the supported load during operation.
- DO NOT stand beneath or travel under the crane when a load is suspended from it.
- People should not be permitted to stand beneath or travel under any load suspended from this jib.
- DO NOT lift/support people!
- ALWAYS load the jib as recommended on p. 7-8. Failure to properly position a load might cause load swing and result in serious injury.
- DO NOT use the crane if any label is unreadable, damaged, or missing (see “Labeling diagram” on p. 9). Contact Vestil for replacement labels whenever necessary.
- DO NOT modify the crane! Modifications automatically void the limited warranty (see p. 10) and might make the crane unsafe to use.


NOTICE

This product must be maintained as instructed to function properly. Follow the recommendations provided in “Inspections & Maintenance” on p. 8.


Function Tests:

Verify that all mechanisms operate normally by performing the tests below. If an issue is discovered, tag the crane “Out of Service”. Restore the crane to normal operating condition before returning it to service.


1. Test the bearings: rotate jib in both directions. Make sure that the jib rotates smoothly and without producing unusual noises.
2. Test the hoist and trolley according to the manufacturers’ instructions.

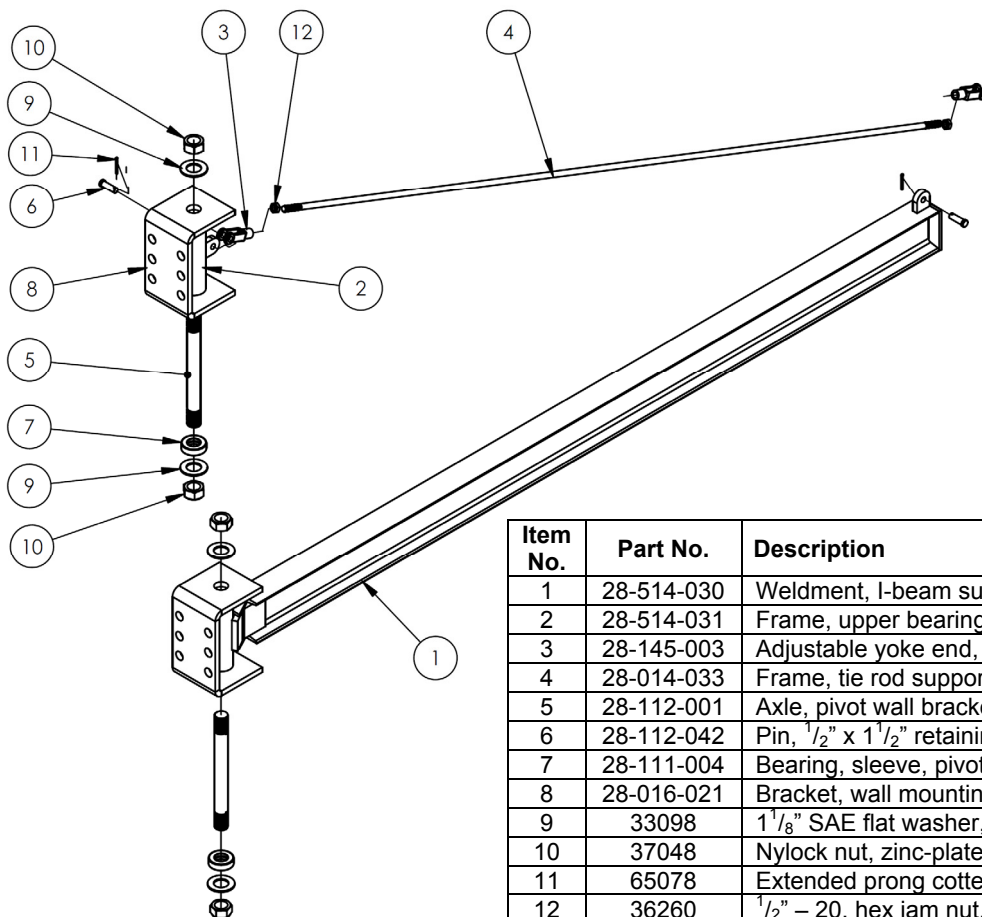FIG. 1: JIB-HC-3 Exploded Parts Diagram and Bill of Materials


Item No.	Part No.	Description	Qty.
1	28-514-030	Weldment, I-beam subassembly	1
2	28-514-031	Frame, upper bearing subassembly	1
3	28-145-003	Adjustable yoke end, small	2
4	28-014-033	Frame, tie rod support, formed	1
5	28-112-001	Axle, pivot wall bracket, formed	2
6	28-112-042	Pin, $\frac{1}{2}$ " x $1\frac{1}{2}$ " retaining clevis, zinc-plated	2
7	28-111-004	Bearing, sleeve, pivot spacer	2
8	28-016-021	Bracket, wall mounting	2
9	33098	$\frac{1}{8}$ " SAE flat washer, zinc-plated	4
10	37048	Nylock nut, zinc-plated, $\frac{1}{8}$ " – 7, grade 2	4
11	65078	Extended prong cotter pin, zinc finish, $\frac{1}{8}$ " x $1\frac{1}{2}$ "	2
12	36260	$\frac{1}{2}$ " – 20, hex jam nut, zinc-plated	2

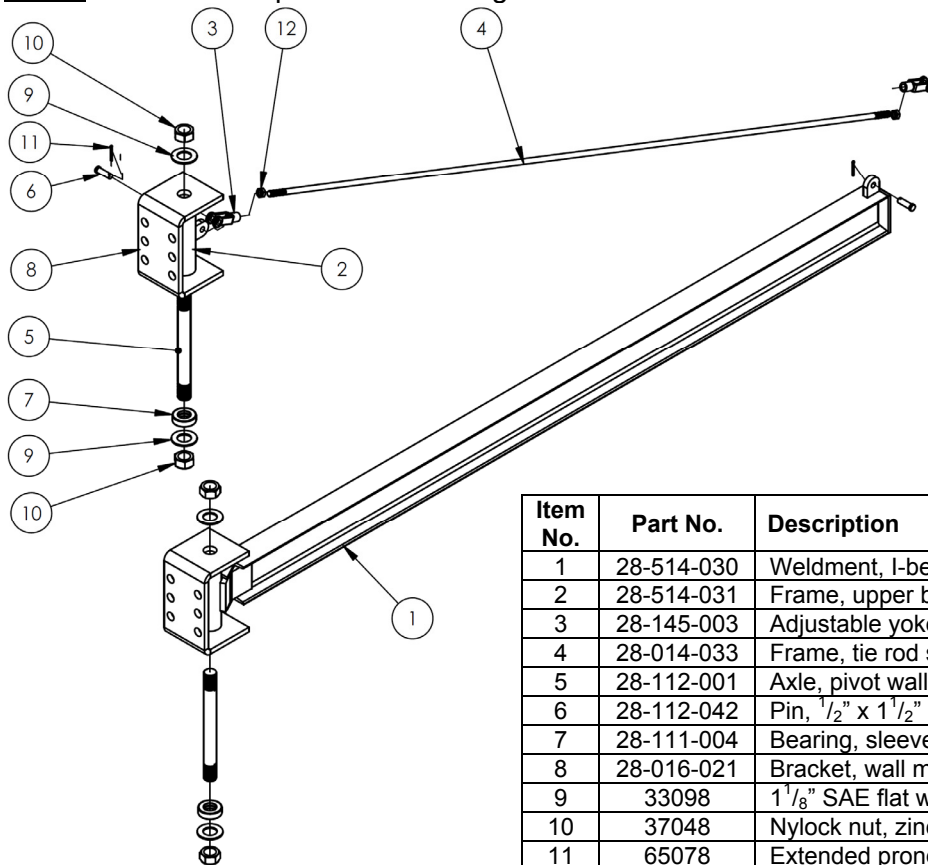FIG. 2: JIB-HC-6 Exploded Parts Diagram and Bill of Materials

Item No.	Part No.	Description	Qty.
1	28-514-030	Weldment, I-beam subassembly	1
2	28-514-031	Frame, upper bearing subassembly	1
3	28-145-003	Adjustable yoke end, small	2
4	28-014-033	Frame, tie rod support, formed	1
5	28-112-001	Axle, pivot wall bracket, formed	2
6	28-112-042	Pin, $\frac{1}{2}$ " x $1\frac{1}{2}$ " retaining clevis, zinc-plated	2
7	28-111-004	Bearing, sleeve, pivot spacer	2
8	28-016-021	Bracket, wall mounting	2
9	33098	$1\frac{1}{8}$ " SAE flat washer, zinc-plated	4
10	37048	Nylock nut, zinc-plated, $1\frac{1}{8}$ " – 7, grade 2	4
11	65078	Extended prong cotter pin, zinc finish, $\frac{1}{8}$ " x $1\frac{1}{2}$ "	2
12	36260	$\frac{1}{2}$ " – 20, hex jam nut, zinc-plated	2

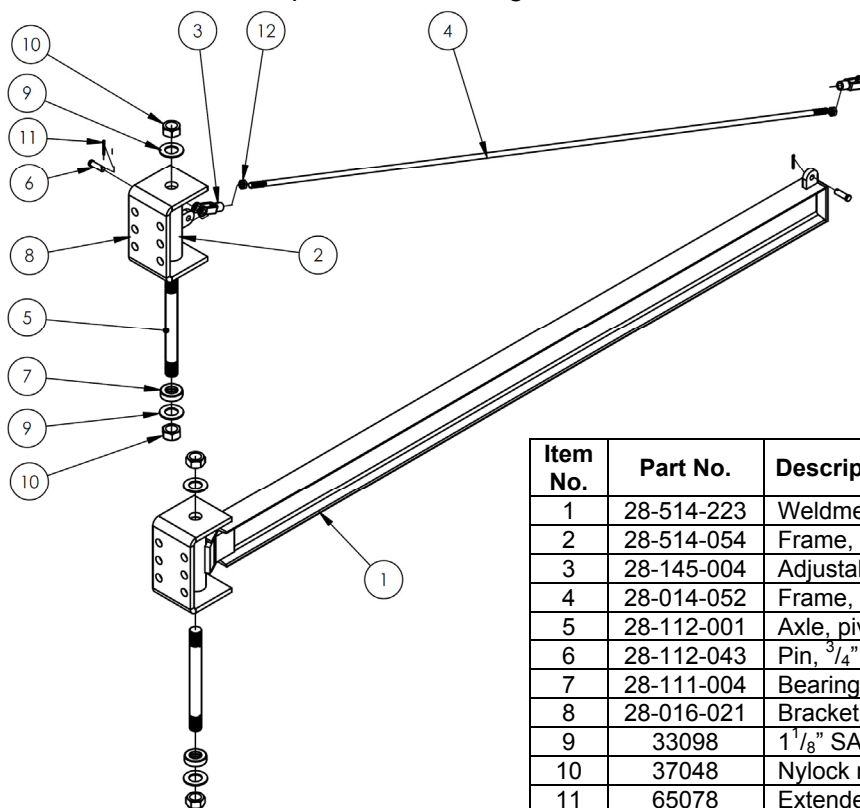FIG. 3: JIB-HC-10 Exploded Parts Diagram and Bill of Materials

Item No.	Part No.	Description	Qty.
1	28-514-223	Weldment, I-beam subassembly	1
2	28-514-054	Frame, upper bearing subassembly	1
3	28-145-004	Adjustable yoke end, small	2
4	28-014-052	Frame, tie rod support, formed	1
5	28-112-001	Axle, pivot wall bracket, formed	2
6	28-112-043	Pin, $\frac{3}{4}$ " x 2" retaining clevis, zinc-plated	2
7	28-111-004	Bearing, sleeve, pivot spacer	2
8	28-016-021	Bracket, wall mounting	2
9	33098	$1\frac{1}{8}$ " SAE flat washer, zinc-plated	4
10	37048	Nylock nut, zinc-plated, $1\frac{1}{8}$ " – 7, grade 2	4
11	65078	Extended prong cotter pin, zinc finish, $\frac{1}{8}$ " x $1\frac{1}{2}$ "	2
12	36266	$\frac{3}{4}$ " – 20, hex jam nut, zinc-plated	2

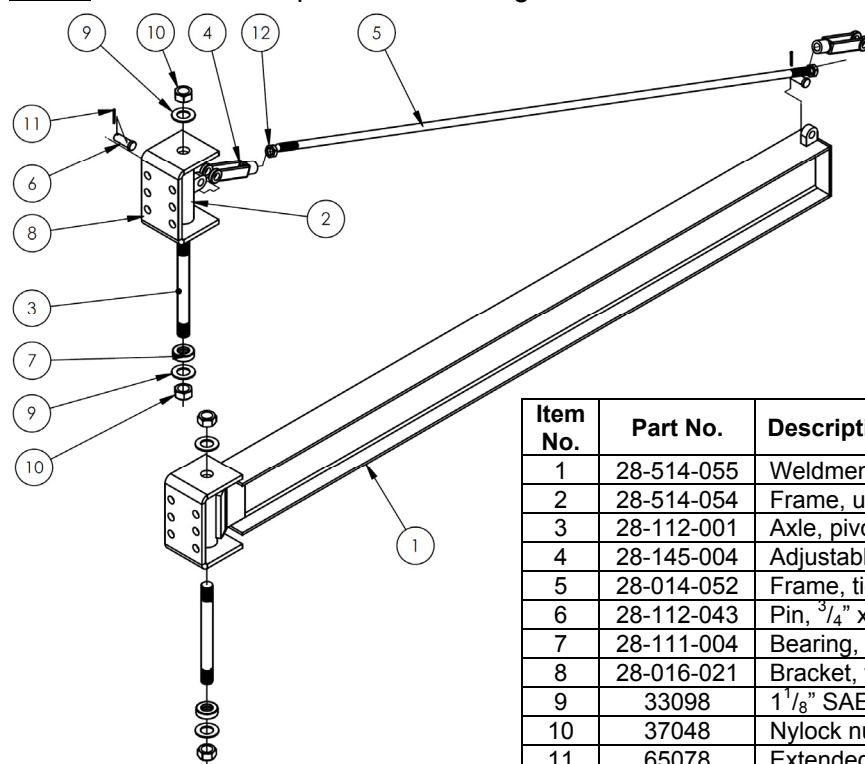
FIG. 4: JIB-HC-20 Exploded Parts Diagram and Bill of Materials

Item No.	Part No.	Description	Qty.
1	28-514-055	Weldment, I-beam subassembly	1
2	28-514-054	Frame, upper bearing subassembly	1
3	28-112-001	Axle, pivot wall bracket, formed	2
4	28-145-004	Adjustable yoke end, small	2
5	28-014-052	Frame, tie rod support, formed	1
6	28-112-043	Pin, $\frac{3}{4}$ " x 2" retaining clevis, zinc-plated	2
7	28-111-004	Bearing, sleeve, pivot spacer	2
8	28-016-021	Bracket, wall mounting	2
9	33098	1 $\frac{1}{8}$ " SAE flat washer, zinc-plated	4
10	37048	Nylock nut, zinc-plated, 1 $\frac{1}{8}$ " - 7, grade 2	4
11	65078	Extended prong cotter pin, zinc finish, $\frac{1}{8}$ " x 1 $\frac{1}{2}$ "	2
12	36266	$\frac{3}{4}$ " - 20, hex jam nut, zinc-plated	2


Assembly Instructions:

NOTE: Numbers in parentheses correspond to parts numbers in the exploded parts diagrams on pp. 3-5.


Step 1: Drill $\frac{13}{16}$ " holes in the locations shown on a steel column; then fasten the brackets (28-016-021) to the column with $\frac{3}{4}$ " fasteners of suitable length (selected by your building engineer).

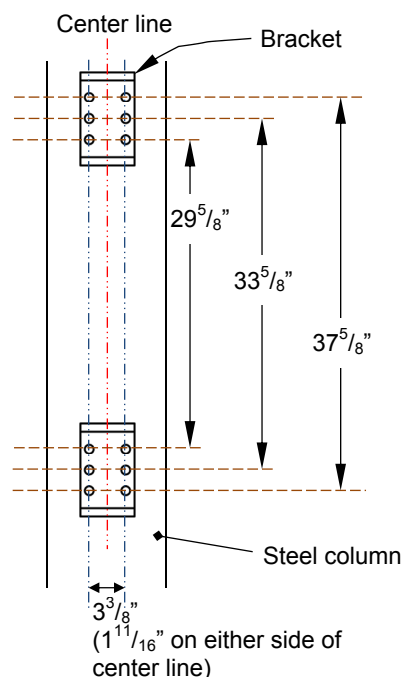

Step 2: Set the upper bearing on top of the sleeve bearing and set them inside the upper bracket; then insert the axle through the bracket and bearing. Install washers and lock nuts as shown below. Set the end of the I-beam on top of a sleeve bearing and put them in the lower bracket. Install the axle and hardware as shown below. Do not overtighten the lock nuts. A gap of $\sim \frac{1}{4}$ " should be present between the top of the bracket and the sleeve bearing or I-beam bearing.

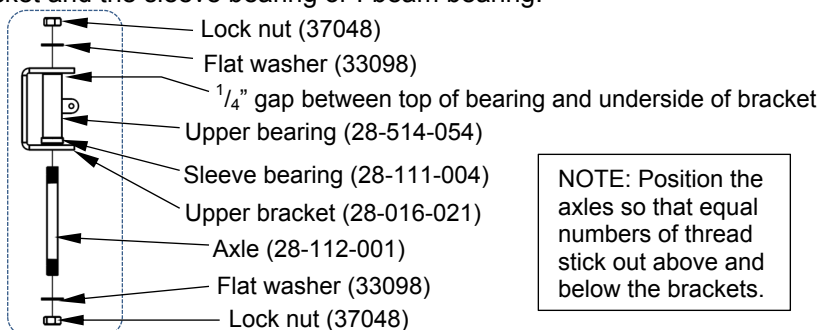


NOTE: Position the axles so that equal numbers of thread stick out above and below the brackets.

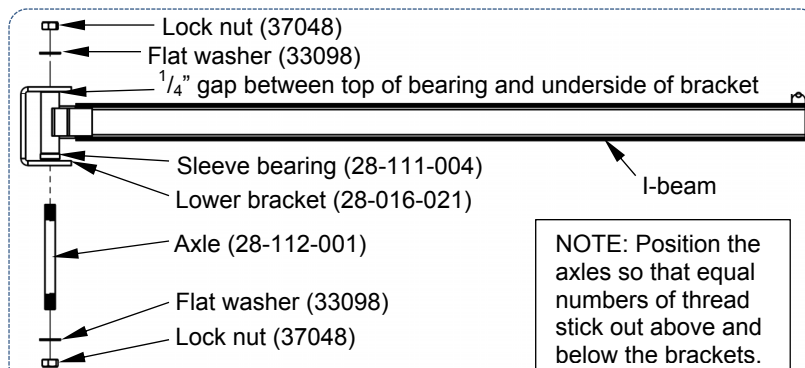

NOTE: Position the axles so that equal numbers of thread stick out above and below the brackets.

Step 3: Attach the tie rod to the jib. Wind a jam nut onto both ends of the tie rod. Then, wind a yoke onto each end of the rod. Slip the legs of the yokes around the mounting tabs. Pin the connections with clevis pins. Secure the clevis pins with the cotter pins.

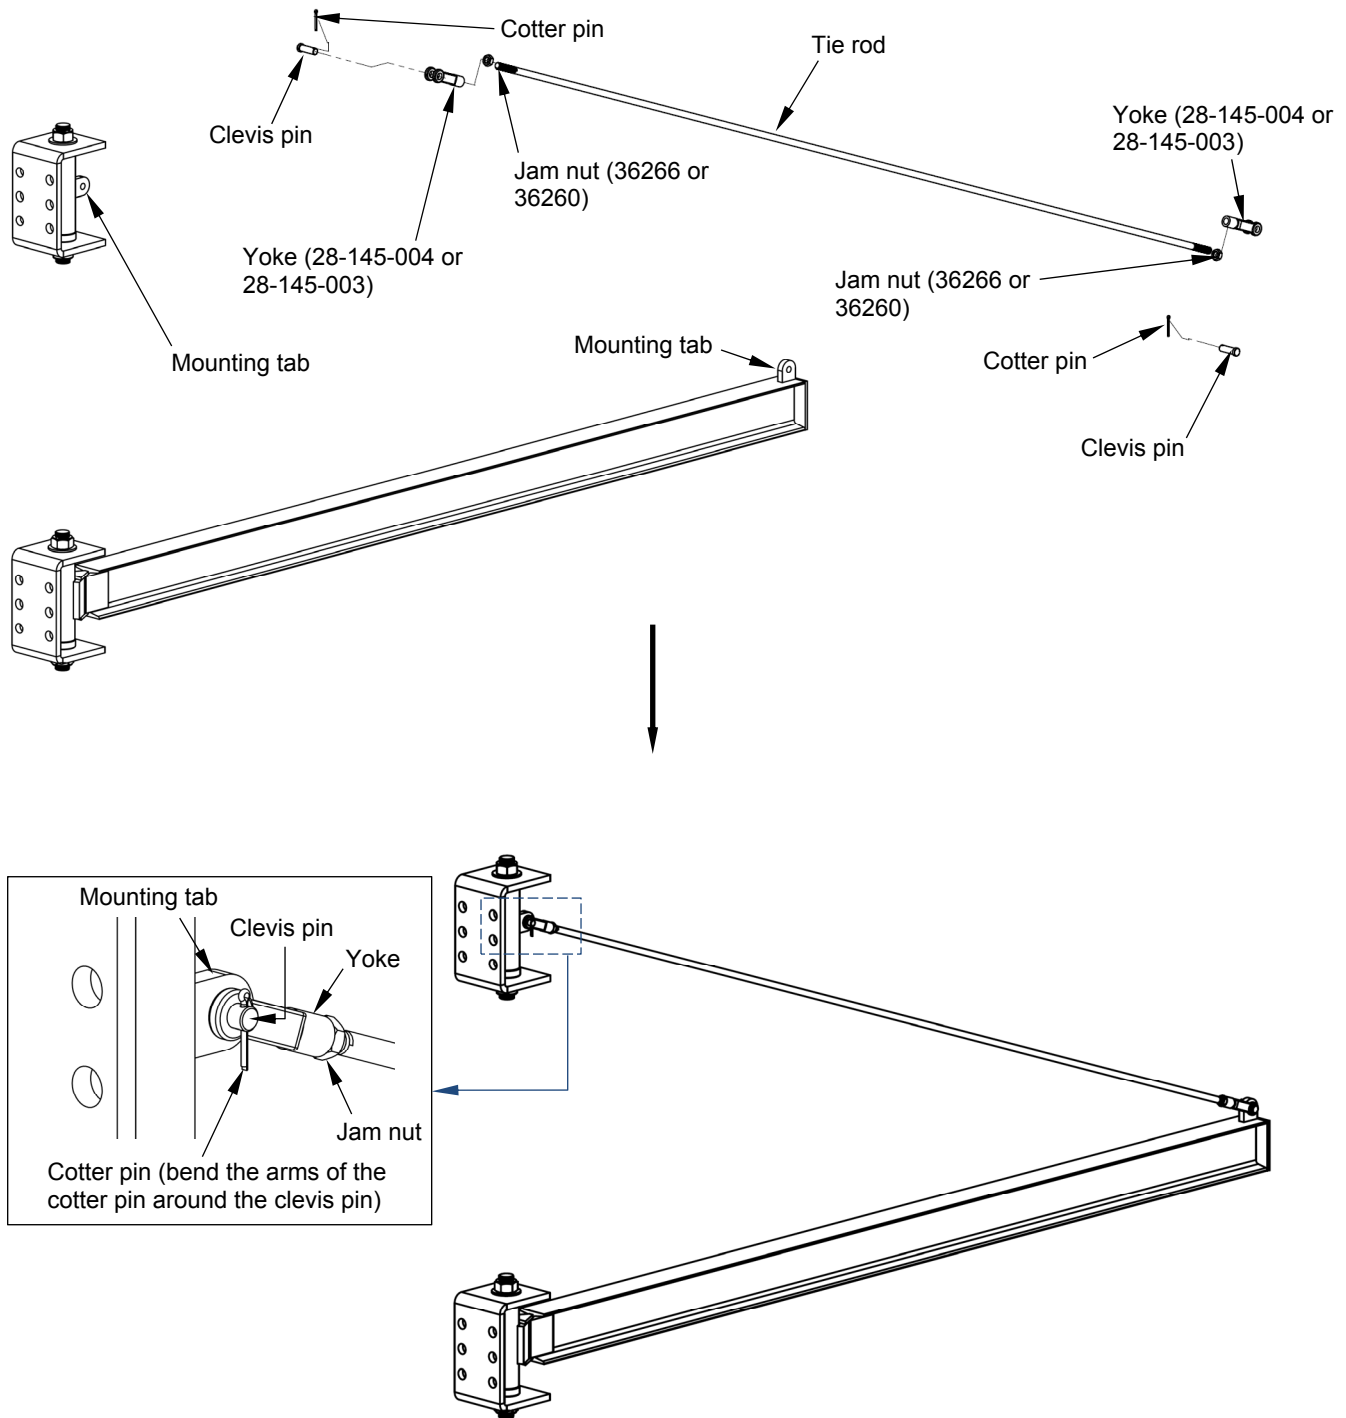

Use instructions:

Before using the crane for the first time, OSHA regulations require an "Initial Inspection". The inspection procedure is paraphrased on p. 11-12. However, you should read the entire regulation periodically, which can be accessed through <http://www.OSHA.gov/>.



- ⚠ WARNING** To reduce the likelihood of serious personal injuries caused by improper or careless operation:
- Only qualified, designated crane operators should use this device. The operating instructions in this manual *supplement* safe crane and hoist operation practices learned during your training program. ALWAYS apply the safe material handling practices learned from your training program (for example, practical operating examination) and conform to OSHA crane operation standards (29 CFR 1910.179).
 - All personnel not using the crane should remain outside the operating area during use. Instruct all persons to remain at a safe distance during operation.
 - DO NOT use the crane if: 1) you observe any damage to the (wall mounting) brackets or hear unusual noise during use; 2) if you observe any warping or deformation of the boom, the brackets, the load hook or chain (or cable). Notify your supervisor and authorized maintenance personnel if you notice anything unusual.

Proper load lifting:

Always follow the instructions provided with your hoist and trolley.



Position the trolley and hoist directly above the load. Proper loading requires the operator to position the hoist above the center of the load. Proper positioning is diagrammed below:

Proper load centering beneath hoist and trolley

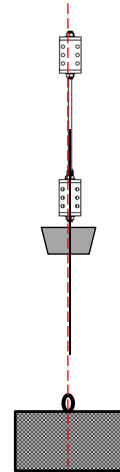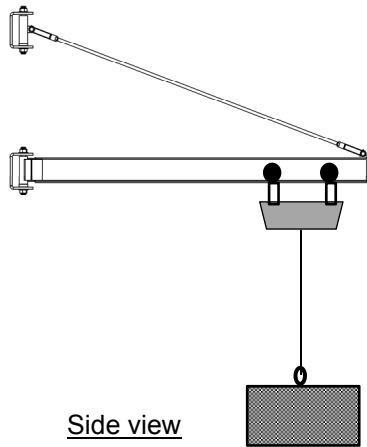

Hoist cable/chain aligned with centerline (red dashed line)

Improperly positioned loads

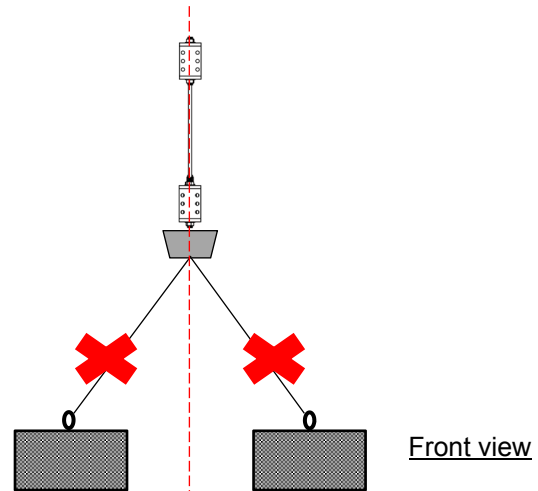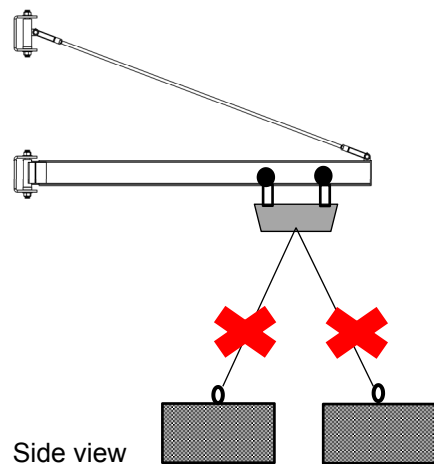

Hoist cable/chain not aligned with centerline (red dashed line)

Connect the load to the hoist chain/cable, using appropriate rigging. Then, raise the load only as high as necessary. Slowly direct the load to the desired location. Once the I-beam and hoist are properly centered above the work location, lower the load and disconnect it from the hoist.

Inspections:

Apply Occupational Safety and Health Administration (OSHA) crane inspection procedures in 29 CFR 1910.179). Inspections are classified according to the intervals at which inspection should be performed.

1. **Initial inspection** — before a new or modified crane may be used for the first time, it must be inspected to insure normal condition. Conduct a “Frequent inspection” as described next.

After the first use, the crane end-user/owner must conduct the following 2 types of inspection:

2. **Frequent inspection** [29 CFR 1910.179(j)(1)(ii)(a)] — Daily to monthly intervals.

The following items shall be inspected for defects at the intervals specifically indicated, including observation *during operation* for any defects which might appear between inspections. All deficiencies such as those listed shall be carefully examined to determine whether they constitute a safety hazard:

- **[Inspect daily]** All functional operating mechanisms (mast, beam, socket, bearings, tie rod, rollers, and mast clamp) for maladjustment interfering with proper operation. Verify that the rollers operate smoothly by turning the crane 4-6 feet in one direction.
- **[Inspect daily (visually); inspect monthly and make a certification record, which includes the date of inspection, the signature of the person who performed the inspection and the serial number (or other identifier) of the hook inspected]** Hooks with deformation or cracks. Immediately discard hooks with cracks or that have a throat opening that is more than 15 percent in excess of normal throat opening, or that are twisted more than 10° from the plane of the unbent hook.
- **[Inspect daily (visually); monthly inspection with a certification record which includes the date of inspection, the signature of the person who performed the inspection and an identifier of the chain which was inspected]** Hoist chains, including end connections, for excessive wear, twist, distorted links interfering with proper function, or stretch beyond hoist manufacturer's recommendations.
- **[Inspect weekly]** All functional operating mechanisms (mast, beam, socket, tie rod, rollers, mast clamp, pins, and yokes, bolts and nuts, including anchor bolts and nuts) for excessive wear.
- **[Inspect weekly]** Rope reeving for noncompliance with hoist manufacturer's recommendations.

3. **Periodic inspection** [29 CFR 1910.179(j)(1)(ii)(b)] — 1 to 12-month intervals.

Complete inspections of the crane shall be performed at intervals depending upon its activity, severity of service, and environment, or as specifically indicated below. Perform all of the requirements described for frequent inspections and the following bulleted items. Carefully examine the crane for any problems such as those listed below to determine whether they constitute a safety hazard:

- Deformed, cracked, or corroded members.
- Loose bolts or rivets.
- Cracked or worn sheaves and drums.
- Worn, cracked or distorted parts such as pins, bearings, rollers, locking and clamping devices.
- Excessive wear on brake system parts, linings, pawls, and ratchets.
- Load, wind, and other indicators over their full range, for any significant inaccuracies.
- Gasoline, diesel, electric, or other power plants for improper performance or noncompliance with applicable safety requirements.
- Excessive wear of chain drive sprockets and excessive chain stretch.

Cranes not in regular use: for each of the 3 bullet points below, in addition to the *crane* inspection all rope which has been idle for a period of a month or more due to shutdown or storage of a crane on which it is installed must be given a thorough inspection before it is used. An appointed person, whose approval is required before the rope may be used, must inspect the rope for all types of deterioration. A certification record must be available for inspection. The record must include at least the date of inspection, the signature of the person who performed the inspection and an identifier for the rope inspected.

- A crane which has been idle for a period of 1 month or more, but less than 6 months, shall undergo a “Frequent inspection” before being returned to service.
- A crane which has been idle for a period of over 6 months shall be given a “Complete inspection” before placing in service.
- Standby cranes shall be given a “Frequent inspection” at least semi-annually (twice per year; 1 inspection each 6 months).

Maintenance:


Lubricate pivot points whenever the boom is noisy while being rotated or when the resistance to rotation increases.

At least once per month:

1. Check both wall mounting brackets and anchoring hardware. Make sure that the brackets are securely anchored (i.e. do not wobble). Confirm that anchoring hardware is in normal condition. Replace an anchor if it is loose, broken, or severely worn.
2. Examine both axles and the nuts and washers attached to them. Tighten all loose fasteners and replace an axle that is damaged.
3. Inspect the sleeve bearings. Replace a bearing if it is substantially worn.
4. Check the inner bearing and the boom bearing for severe wear, bending, cracking and other forms of damage. Replace the entire boom assembly if the boom bearing is damaged.

Labeling diagram:

Only use the dumper if it is labeled as diagrammed below. ALL labels must be readable and undamaged. Replace all damaged/unreadable labels.

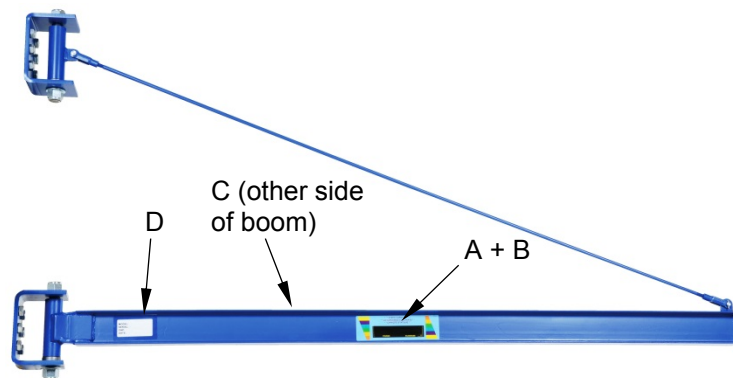

A: Label 391 (both sides of jib) – Capacity



B: Label 560, 561, or 562 (both sides of jib; applied to black rectangle of label 391)



C: Label 586 (on other side of jib) – Hazards of use

⚠ WARNING	⚠ ADVERTENCIA	⚠ AVERTISSEMENT
• DO NOT exceed rated capacity • LOWER LOAD before moving to avoid load swing • NEVER STAND under, beside or in front of load • USE on hard level surface • INSPECT connections before using • READ manual before use	• No exceda la capacidad tasada • Descienda la carga antes de mover para evitar que la carga se balancee • Nunca se sitúe debajo, al lado o delante de la carga • Use en una superficie a nivel dura • Inspeccione las conexiones antes del uso • Lea el manual antes del uso	• NE PAS DÉPASSER la capacité nominale • DESCENDRE la charge avant de la transporter pour éviter la giration • JAMAIS vous mettre sous, à côté de ou devant une charge • UTILISER sur un sol plat et dur • INSPECTER les connexions avant utilisation • LIRE le guide avant utilisation

586 rev 1210

D: Label 287 – Product data label.

MODEL/MODÉLO/MODÈLE	_____
STATIC CAPACITY (evenly distributed)	_____ lbs.
LA CAPACIDAD CONSTANTE (distribuida uniformemente)	_____ kgs.
CAPACITÉ STATIQUE (distribuée régulièrement)	_____ kgs.
SERIAL/SERIE/SÉRIE	_____

287 REV 0812

LIMITED WARRANTY

Vestil Manufacturing Corporation ("Vestil") warrants product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

Who may request service?

Only a warrantee may request service. *You are a warrantee if* you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

What is a "proper request"?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

<u>Mail</u>	<u>Fax</u>	<u>Email</u>
Vestil Manufacturing Corporation 2999 North Wayne Street, PO Box 507 Angola, IN 46703	(260) 665-1339 <u>Phone</u> (260) 665-7586	sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for original dynamic components is 90 days. For wearing parts, the warranty period is 90 days. The warranty periods begin on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the periods begin when the distributor ships the product. Vestil may, at its sole discretion, extend the warranty periods for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any covered part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

